




Dünyanın Havaasını Değıstiren Marka!
For a Breath of Fresh Air!

KULLANMA KILAVUZU & GARANTİ BELGESİ

BSV-D 650
750

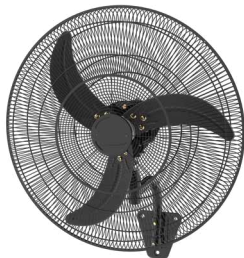

SERİSİ SANAYİ VANTİLATÖRLERİ

BVN markalı ürünler ISO 9001:2015 Kalite Yönetim Sistemi
belgesine sahip üretim tesisinde üretilmektedir.





İMALATÇI VEYA İTHALATÇI FİRMA

ÜNVANI	BAHÇIVAN ELEKTRİK MOTOR SAN. TİC. LTD.ŞTİ.
ADRESİ	Ömerli Mah. Hadımköy-İstanbul Cad.No: 147 Arnavutköy/İSTANBUL
TEL / FAX	0212 771 48 48 / 0212 771 48 42
FİRMA YETKİLİSİNİN İMZA VE KAŞESİ	

ÜRÜNÜN

CİNSİ	FAN
MARKASI	BVN
MODEL	BSV-D
BANDROL VE SERİ NO	
TESLİM TARİHİ ve YERİ	
AZAMI TAMİR SÜRESİ	20 İŞ GÜNÜ
GARANTİ SÜRESİ	2 YIL

SATICI FİRMA

ÜNVANI	
ADRESİ	
TEL / FAX	
FATURA TARİH VE NO	
FİRMA YETKİLİSİNİN İMZA VE KAŞESİ	

MÜŞTERİNİN

ADI SOYADI	
ADRESİ	
TELEFONU	

KULLANIM KILAVUZU & GARANTİ BELGESİ

ÖNLEMLER VE BAKIM

1. Fan duruncaya kadar elle ya da herhangi bir nesneyle kesinlikle dokunmayın.
2. Herhangi bir bozulma olmaması için, Elektrik kablosunu sert bir şekilde çekmeyiniz.
3. Fanın kablosu zarar görmüşse, kesinlikle ürünü çalıştırmayın.
4. Fanı temizlemeden önce muhakkak elektrik bağlantısını kesin. Fanın ön kafesini ve pervanesini çıkarın. Lekeleri silmek için yumuşak bir bez kullanın.
5. Fan pervanesini her türlü darbeden koruyun ve pervane açılarını değiştirmeyin.

TEKNİK ÖZELLİKLER


TİP	VOLTAJ	FREKANS	GÜÇ	DEBİ	ÇAP
	V	Hz	W	m ³ /h	mm
BSV-D 650	220	50	200	12000	650
BSV-D 750	220	50	250	18000	750



1) TABAN MONTAJI

Tabanı monte etmek için donanım çantası "A"yı bulun. (Şekil 1)


1. Tabanı yere koyun.
2. Boruyu tabanın ortasına yerleştirin.
3. (4) M6x12 altıgen cıvatayı direğin ve tabanın birleşme yüzeyinden sokun.
4. Tabanı eğin ve önce bölünmüş kilit rondelası ve rondelayı, daha sonra da bir somun takarak (M6) tek seferde bir adet altıgen cıvatayı sabitleyin.
BU AŞAMADA TAMAMEN SIKMAYIN
Yukarıdaki işlemi kalan cıvatalar ile tekrarlayın.
5. GERİ GİDİN ve borunun birleşme yüzeyinin tabana sıkıca monte olacak şekilde her bir cıvatayı TAMAMEN SIKIŞTIRIN.

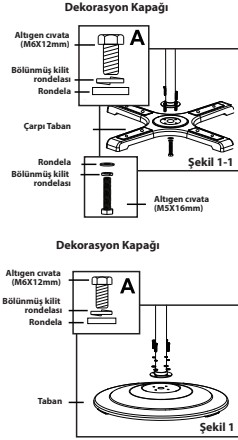

2) DEKORASYON KAPAĞI MONTAJI

Borunun içine monte etmek üzere dekorasyon kapağını bulun (Şekil 2)

1. Vidayı ok yönünde gevşetin ve boynu çıkarın.
2. Dekorasyon kapağını boruya geçirin.
3. Vidayı sıkın.
4. Topuzu çevirin ve iç borunun yüksekliğini bu doğrultuda ayarlayın.


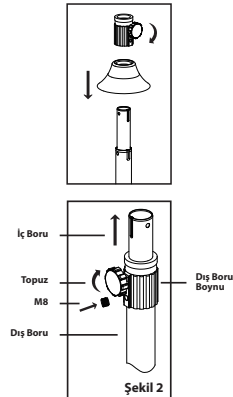


KULLANIM KILAVUZU & GARANTİ BELGESİ

3) MOTOR MONTAJI


Boruya monte etmek üzere tüm motor setini bulun (Şekil 3)

1. Kolay montaj için bağlantının üzerindeki dil, iç boru üzerindeki çentiğe denk gelebilir.
2. Bağlantıyı, iç borunun üstünden geçirin.
3. Arkadaki iki vidayı sıkın. (Şekil 4)

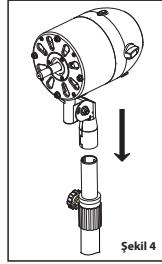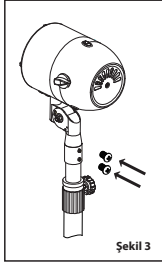

4) ARKA KAFES MONTAJI


Motordaki bu 4 vidayı sökün ve daha sonra arka kafesi monte edin (Şekil 5)

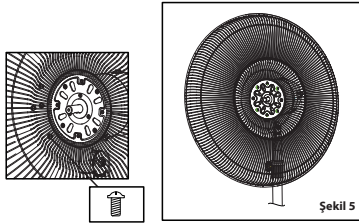





5) PERVANE KANADI MONTAJI

1. Kanadı, motor üzerindeki mil üzerine yerleştirin ve yan vidanın, milin üzerindeki düz yüzeye bakmasını sağlayın (**Şekil 6**)
2. Pervane kanadının yan vidasını tamamen sıkın. Dikkatli olun! Pervane kanadı doğru yönde monte edilmelidir

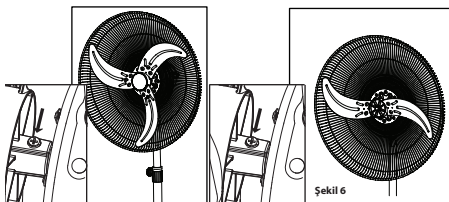


6) ÖN KAFES MONTAJI

1. Ön kafesi, kafes halkasına monte edin ve arka kafes ile eşleştirin.
2. Ön kafesteki tüm kilitleri kapatıp montajı tamamlayın (**Şekil 7**)

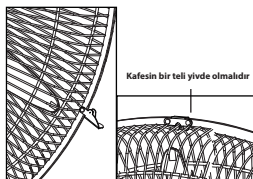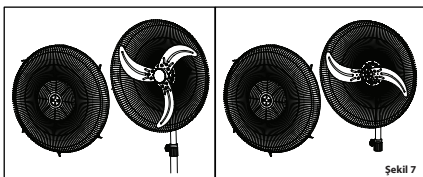

KULLANIM KILAVUZU & GARANTİ BELGESİ

7) ENDÜSTRİYEL DUVAR MONTAJI

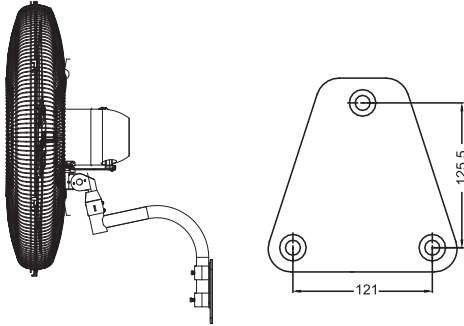


KULLANIM VE BAKIM

1. Fanı temizlemeden önce, fanın kapatılmış ve pervane kanadının durmuş vaziyette olduğundan emin olun!
2. Kafes ve pervane kanadını sökün, sabunlu su ile temizlemek için pamuk veya bez kullanabilirsiniz. Benzin, gazolin veya benzeri organizma eriten nitelikte maddeler kullanmayın.
3. Suyun motora kaçmasını önlemek için, motorun yüzeyini ıslak bezle temizlemekten kaçınin.
4. Fanı, asidik ortamda veya patlayıcı gaz ile aynı ortamda kullanmayın.
5. Dişli ve rulmana yönelik yağı 2000 saatlik kullanım sonrası (en az yılda bir kez) değiştirin; ancak bakım elektrikli ürünün profesyonel servisi tarafından yapılmalıdır. Salınım işlevi nedeniyle fan, dişli kutusuna sahiptir.
6. Kullanmadığınız zaman fanı tekrar kutusuna koyun. Hava alan ve kuru bir yerde muhafaza ederek kostik özellikli ortamlardan uzak tutun.




HIZ KONTROLÜ

1. “0” konumu gücün kapalı olduğu anlamına gelir. (Şekil 1)
2. “1” düşük hız anlamındadır. “2” orta hızı, “3” yüksek hızı ifade eder.

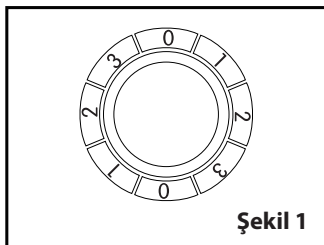

SALINIM KONTROLÜ

1. Motorun üzerinde bir Salınım Kontrolü anahtarı vardır. Bunu açtığınızda fani salınım işlevini senkronize motor aracılığıyla yerine getirir. (Şekil 2)

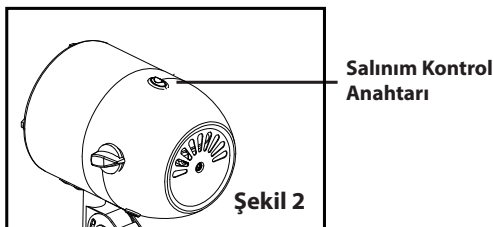

KULLANIM KILAVUZU & GARANTİ BELGESİ

GARANTİ VE SERVİS

Değerli Müşterimiz,

Sizlere iyi ürün vermek kadar, iyi hizmet vermenin de önemine inanıyoruz. Bizi arayıp Satış Temsilcilerimiz ile görüşme yapabilir ve Yetkili Satıcılarımız ile irtibata geçerek size en uygun hizmeti alabilirsiniz.

Aşağıdaki önerilere uymanızı rica ederiz.

1. Ürününüzü aldığınızda Garanti Belgesini Yetkili Satıcınıza onaylattırınız.
2. Ürününüzü kullanma kılavuzu esaslarına göre kullanınız.

BVN tarafından verilen bu garanti, ürünün normalin dışında kullanılmasından doğacak arızaların giderilmesini kapsamadığı gibi, aşağıdaki durumlarda garanti dışıdır:

- 1 Kullanma hatalarından meydana gelen hasar ve arızalar.
- 2 Ürünün müşteriye tesliminden sonraki yükleme boşaltma ve taşıma sırasında oluşan hasar ve arızalar.
- 3 Gerilim düşüklüğü veya fazlalığı, hatalı elektrik tesisatı, ürünün etiketinde yazılı gerilimden (voltajdan) farklı gerilimde kullanma nedenlerinden meydana gelecek hasar ve arızalar.
- 4 Yangın, deprem ve yıldırım düşmesi vb. ile meydana gelecek hasar ve arızalar.
- 5 Ürünün kullanma kılavuzlarında yer alan hususlara aykırı kullanılmasından kaynaklanan arızalar.

Yukarıda belirtilen arızaların giderilmesi ücret karşılığında yapılır. Ürünün kullanım yerine montajı ve nakliyesi ürün fiyatına dahil değildir.

Garanti belgesinin onaylanarak müşteriye verilmesi sorumluluğu, tüketicinin malı satın aldığı satıcı, bayi, acente ya da temsilciliklere aittir.

Garanti süresinde anlaşmazlık doğduğu takdirde fatura tarihi esas alınacağından, kullanıcının Garanti Belgesiyle birlikte faturayı veya okunaklı bir fotokopisini muhafaza etmesi gereklidir.

Garanti belgesi üzerinde tahrifat yapılması, ürün üzerindeki orijinal seri numarasının kaldırılması veya tahrif edilmesi hallerinde garanti belgesi geçersizdir.






Dünyanın Havasını Değiştiren Marka
For a Breath of Fresh Air!

USER'S MANUAL & CERTIFICATE OF WARRANTY

BSV-D 650
750

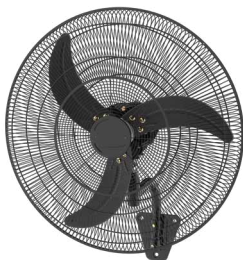

SERIES INDUSTRY FANS

Products with BVN brand are manufactured in production facilities with
ISO 9001: 2015 Quality Management System certificate.





MANUFACTURER'S / IMPORTER'S	
NAME	BAHÇIVAN ELEKTRİK MOTOR SAN. TİC. LTD.ŞTİ.
ADDRESS	Ömerli Mah. Hadımköy-İstanbul Cad.No: 147 Arnavutköy/İSTANBUL
PHONE / FAX	0212 771 48 48 / 0212 771 48 42
COMPANY REPRESENTATIVE'S SIGNATURE/SEAL	
PRODUCT'S	
TYPE	FAN
BRAND	BVN
MODEL	BSV-D
LABEL AND SERIAL NO	
DELIVERY DATE&PLACE	
MAX.REPAIR PERIOD	20 WORK-DAY
WARRANTY PERIOD	2 YEARS
SELLER'S	
NAME	
ADDRESS	
PHONE / FAX	
INVOICE DATE&NUMBER	
DATE/SIGNATURE/SEAL	
MÜŞTERİNİN	
ADI SOYADI	
ADRESİ	
TELEFONU	

USER'S MANUAL & CERTIFICATE OF WARRANTY

PRECAUTIONS AND MAINTENANCE

1. Never touch the fan until it stops manually or with any object.
2. To avoid any distortion, do not pull the power cord sharply.
3. If the fan's cable is damaged, do not operate strictly product.
4. Disconnect the Fan sure the power cord before cleaning. Remove the front grille of the fan and the fan. Use a soft cloth to remove stains.
5. Protect the fan wheel all kinds of impact and do not change the angle of the propeller.

TECHNICAL FEATURES



	VOLTAGE	FREQUENCY	POWER	AIR FLOW	DIAMETER
TYPE	V	Hz	W	m ³ /h	mm
BSV-D 650	220	50	200	12000	650
BSV-D 750	220	50	250	18000	750



1) BASE ASSEMBLY

Locate Hardware Bag "A" to Assemble Base. (Figure 1)



1. Place Base on floor.
2. Fit the column on the center of Base.
3. Insert (4) M6x12mm Hex Bolts through the flange of the column and Base.
4. Tilt Base and secure one Hex Bolt at a time by first putting on a Split Lockwasher and Washer then a Nut (M6). DO NOT FULLY TIGHTEN AT THIS TIME. Repeat above procedure with remaining Bolts.
5. GO BACK AND FULLY TIGHTEN each Nut so that the flange of the column is securely assembled to the Base.

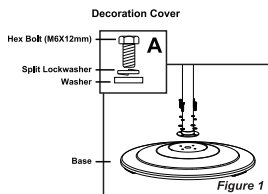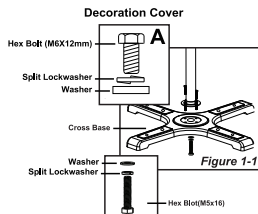

2) DECORATION COVER ASSEMBLY

Locate the Decoration Cover to Assemble into the Column. (Figure 2)

 1. Loosen the screw which is pointed by the arrow and take off the Neck.
2. Put the Decoration cover into the Column.
3. Tighten up the Screw.
4. Turn the knob and the height of the Inner Column can be adjusted accordingly.

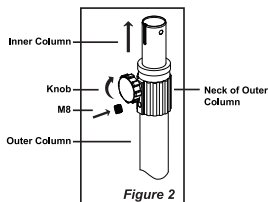



USER'S MANUAL & CERTIFICATE OF WARRANTY

3) MOTOR ASSEMBLY


Locate the whole set Motor to Assemble into the Column. **(Figure 3)**

1. The tongue on the connection is able to match the groove on the Inner Column for easy assembly.
2. Insert the Connection into the top of the inner Column.
3. Tighten up two screws on the back. **(Figure 4)**

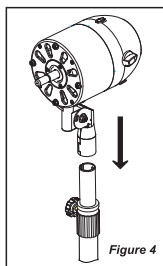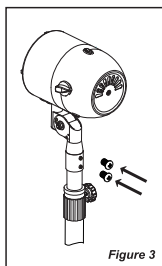

4) REAR GRILL ASSEMBLY


Unscrew these 4 screws on the motor, and then assembly the rear grill. **(Figure 5)**

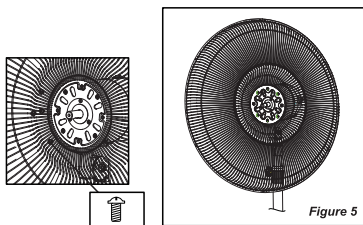





5) FAN BLADE ASSEMBLY

1. Insert the Fan blade on the shaft of the motor. And let the lateral screw face to the flat surface on the shaft. **(Figure 6)**
2. Fully tighten up the lateral screw of the Fan blade. Be careful, the fan blade should be assembled by the correct direction.

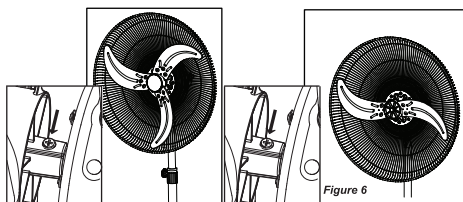


6) FRONT GRILL ASSEMBLY

1. Assembly the Front Grill in the Grill Ring and then fit matched the Rear Grill together.
2. Close all the locks on the Front Grill and finish the assembly. **(Figure 7)**

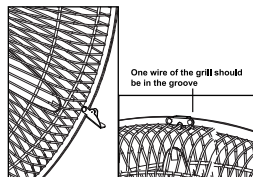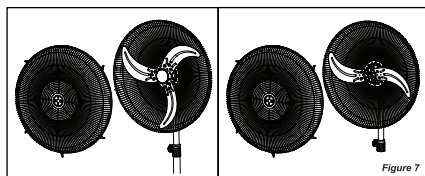

USER'S MANUAL & CERTIFICATE OF WARRANTY

7) INDUSTRIAL WALL ASSEMBLY

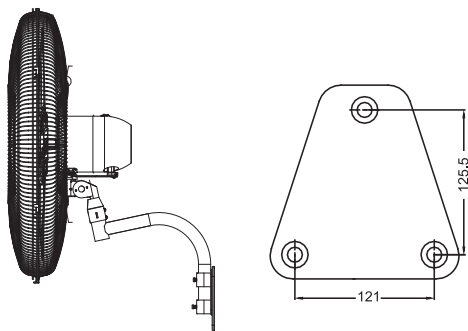

USE AND MAINTENANCE

1. Before you cleaning the fan, please ensure that the fan is switched off, and the Fan Blade stop turningl.
2. Disassembly the Grill and Fan Blade, you can use soft cloth or cottons to bedew the soap water to clean. It does not allow to use the benzene, gasoling, organism-melting agent, etc.
3. Don't use the wet cloth to clear the surface of the motor to prevent the water go into the motor.
4. Don't use the fan on the place with acidic or explosive gas.
5. You shold replace the old grease for the wheel gear and bearing room (annually at least) after usage of 2000 hours, but the maintenance must be the electric appliances professional personnel. If the fan is with gear box for oscillating function.
6. If does not use the fan, please repack into the carton. And put it on the ventilative and dry place where it's without causticity air etc.



SPEED CONTROL

1. "0" position is power off. (Figure 1)
2. "1" is the low speed, "2" is the middle speed, "3" is the high speed.


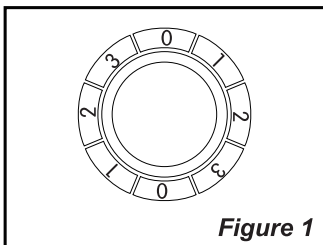


Figure 1

OSCILLATING CONTROL

1. There is a Oscillating Control Switch on the top of the Motor. Turn On, then the fan can implement the oscillating function by the synchronous motor. (Figure 2)

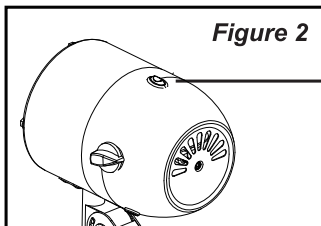

**Oscillating
Control Switch**

USER'S MANUAL & CERTIFICATE OF WARRANTY

WARRANTY and SERVICE

Dear customer,

We believe that providing good service is as important as providing good products for you. You can contact our Sales Representatives by calling us or obtain the most suitable service for you by contacting our Authorized Dealers.

We recommend you to follow the advices below.

1. When you buy a product, have your Authorized Dealer approve the Warranty Deed
2. Use your product according to the user's manual.

The warranty provided by BVN does not cover the damages arising out of using the product under conditions other than its normal conditions of use. The following conditions are also not included in the warranty:

1. Damages and defects arising out of faulty usage,
2. Damages and defects which occur while loading, unloading or carrying the product after it has been delivered,
3. Damages and defects arising due to low or high voltage, faulty electrical installation and using the product at a different voltage than the one written on its label,
4. Damages and defects due to fire, earthquake, lightning strike, etc.
5. Damages occurring due to using the product under conditions not conforming to the issues stated in the user's manual.

The above-mentioned damages are fixed on payment.

Assembly and transport of the product is not included in the product price. The responsibility of approving the warranty deed and submitting it to the customer belongs to the seller, dealer, agency or representative from which the customer has purchased the product.

Since the invoice will be taken as reference if a misunderstanding occurs about the warranty period, the user must keep the invoice and a copy of it together with the Warranty Deed.

If the warranty deed is altered, the original serial number on the product is removed or altered; the warranty deed will become invalid.



www.bvnair.com

T. +90 212 771 48 48 F. +90 212 771 48 42
sales@bvnair.com / export@bvnair.com