

UVENTS

UVS-FGM63

HIGH-PRESSURE CENTRIFUGAL FAN

Installation, Operation & Maintenance Manual



READ FIRST

Keep this manual with the fan. Mechanical installation and electrical work must be performed by qualified personnel.

Product overview

UVS-FGM63 is a base-mounted, direct-driven centrifugal fan for industrial ventilation systems requiring high static pressure. Its eight-blade backward-curved impeller and robust DKP/St-37 sheet-steel construction provide stable airflow and long service life. This manual covers all 18 active UVS-FGM63 variants from 63-28 through 63-112.

ACTIVE RANGE
18 variants

AIRFLOW
1,820–42,600 m³/h

MAX PRESSURE
4,350–9,099 Pa

İren Fan Metal Sanayi İç ve Dış Tic. Ltd. Şti. • sales@uvents.com.tr • +90 212 482 0216



1 Safety

DANGER

Isolate the electrical supply, lock out against restart and verify absence of voltage before opening the casing, removing a guard or touching the impeller.

- Connect protective earth. Electrical work must follow the installed motor nameplate, terminal-box diagram and local regulations.
- The impeller may start unexpectedly and can retain momentum after shutdown. Keep hands, tools and loose clothing clear until complete stop.
- Guard every accessible inlet and outlet. Never operate with a missing guard, loose cover, damaged casing or foreign object inside the fan.
- The fan is heavy and may have sharp sheet-metal edges. Use rated lifting equipment, stable support and suitable gloves; never lift by the motor, cable or inlet/outlet.
- Do not convey explosive, corrosive, sticky, hot or abrasive material unless the exact supplied configuration and project documentation approve it.

2 Technical data

Model	Max m ³ /h	Max Pa	rpm	V 3~	kW	A
63-28	1,820	4,350	2,800	230/380	0.37	0.68
63-31	1,860	4,350	2,780	230/380	0.55	1.0
63-35	2,700	5,199	2,800	230/380	1.10	2.0
63-40A	3,780	5,249	2,840	230/380	2.20	4.1
63-40B	1,890	5,299	1,390	230/380	0.37	0.6
63-45A	5,400	5,399	2,870	380	4.00	7.1
63-45B	2,700	5,449	1,365	230/380	0.55	0.9
63-50A	7,500	7,899	2,885	380	7.50	13.2
63-50B	3,780	5,949	1,380	230/380	1.10	1.7
63-56A	10,800	8,399	2,930	380	11.00	20
63-56B	5,400	6,399	1,385	230/380	1.50	2.1
63-63A	15,000	8,999	2,925	380	18.50	34
63-63B	7,500	6,999	1,410	230/380	2.20	3.8
63-71	10,800	8,999	1,430	380	5.50	9
63-80	15,000	9,049	1,430	380	7.50	12.8
63-90	21,300	9,049	1,460	380	15.00	25
63-100	31,000	9,099	1,460	380	30.00	52
63-112	42,600	9,099	1,465	380	45.00	80

All models: 50 Hz, three-phase AC, IP55, insulation class F, IE3 and direct drive. Models use two- or four-pole motors as listed by speed. Normal operating temperature: -20 °C to +50 °C. The installed motor nameplate is primary for electrical connection and protection settings.

Property	Series Information
Fan / drive	Centrifugal fan / direct drive
Impeller	8-blade backward-curved impeller
Standard materials	DKP/St-37 sheet-steel casing and impeller
Mounting / connections	Base-mounted / round inlet and rectangular outlet
Speed control	VFD regulation only within motor-approved limits

Warranty

Two-year warranty against manufacturing defects, subject to UVENTS warranty terms. Incorrect installation or wiring, operation outside declared limits, unauthorized modification, transport damage after delivery and inadequate maintenance may invalidate coverage.

3 Before installation

- Confirm model, duty point and accessories against the approved selection. Inspect casing, impeller, motor, base, vibration isolators, guards, cable and terminal box for damage.
- Verify the electrical supply against the motor nameplate. Confirm the support can carry the fan mass, operating forces and connected duct loads without distortion.
- Check that the conveyed air is clean or lightly dusty and compatible with the fan and project requirements. Provide safe service clearance and suitable inlet/outlet guarding.

4 Installation

1. Lift only from structural lifting points with rated equipment. Keep clear of suspended loads and never lift by the motor, terminal box, cable or connection spigots.
2. Install on a level, rigid foundation or frame. Use all base fixing points and specified vibration isolators; do not twist the casing during tightening.
3. Support ducts independently. Align connections without forcing the fan and use suitable flexible connectors where vibration transmission must be limited.
4. Provide a straight, unobstructed inlet where practical and avoid abrupt fittings at the inlet. Keep the outlet arrangement consistent with the approved system design.
5. Fit protective guards wherever the inlet, outlet, shaft or rotating parts are accessible. Seal and protect outdoor installations if specifically approved for outdoor duty.
6. Before energizing, verify secure fasteners, correct alignment, free impeller rotation, removed foreign objects, complete guards and clear inlet/outlet.

5 Electrical connection

WARNING

Only a qualified electrician may connect the fan. The diagram supplied with the installed motor and its nameplate take priority over this general reference.

- All UVS-FGM63 models use three-phase motors. Verify the exact voltage, frequency, current, terminal links and protection requirements on the installed motor nameplate.
- Connect protective earth and provide a lockable local isolator, short-circuit protection, contactor and overload protection set to the installed motor.
- After a brief start, verify rotation direction against the casing arrow. Isolate before correcting phase sequence; never attempt correction while energized.
- The selector lists inverter regulation from 25 to 60 Hz. Use a VFD only when approved for the supplied motor and application; program motor nameplate values, minimum/maximum frequency and acceleration limits correctly.
- Close the terminal box and cable glands to preserve the declared protection. Keep cables away from sharp edges, vibration and hot surfaces.

6 Commissioning and operation


- Confirm secure mounting, aligned ducts, fitted guards, earth continuity, correct protection, removed foreign objects and free impeller rotation.
- Start briefly and verify rotation. Then check voltage, current, airflow, pressure, noise, vibration, motor temperature and VFD operation where fitted.
- Stop immediately for rubbing, severe vibration, smoke, electrical smell, overheating, excessive current or loose components. Correct the cause before restart.

7 Maintenance and troubleshooting

- Isolate and lock out all supplies and wait for complete stop before service. Inspection frequency should be adjusted to operating conditions and conveyed material.
- Inspect fasteners, base, vibration isolators, guards, duct connections, impeller deposits/wear, motor, terminals, cable, corrosion, noise and vibration.
- Clean deposits evenly without bending blades or removing balance weights. Qualified personnel must assess cracks, severe wear, deformation or persistent vibration.

Problem	Possible cause	Safe action
No start	Supply, protection, VFD or wiring	Isolate; check nameplate diagram and protection.
Low airflow	Blocked duct; wrong rotation; deposits	Clear safely; verify rotation and clean.
Noise/vibration	Loose base; buildup; impeller contact	Stop and isolate; inspect, clean and secure.
High current	Wrong duty/rotation; blockage; VFD setting	Stop; verify system, nameplate and settings.


8 Dimensions and installation reference

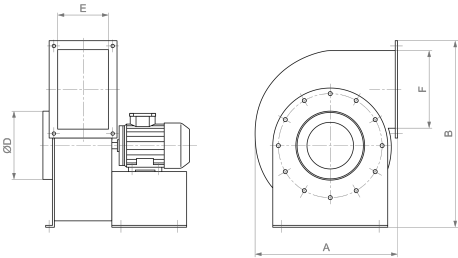

Model	A	B	D	E	F
63-28	370	305	150	140	140
63-31	420	450	150	160	160
63-35	475	495	170	180	180
63-40A	535	540	200	200	200
63-40B	535	540	200	200	200
63-45A	600	580	220	230	230
63-45B	600	580	220	230	230
63-50A	672	645	250	260	260
63-50B	672	645	250	260	260
63-56A	755	720	285	290	290
63-56B	755	720	285	290	290
63-63A	845	850	325	320	320
63-63B	845	850	325	320	320
63-71	950	910	370	360	360
63-80	1,065	955	420	410	410
63-90	1,195	1,070	480	460	460
63-100	1,340	1,240	540	520	520
63-112	1,505	1,410	600	580	580

All dimensions are in mm. Values follow the current UVENTS selector. Use the approved project or supplied production drawing for final coordination.

9 Electrical connection reference

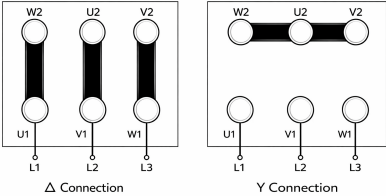

General reference only. Follow the diagram supplied with the installed motor. The motor nameplate and terminal-box diagram take priority; terminal links, supply voltage and protection settings must not be inferred.

FINAL CHECK

Base secure • ducts aligned • inlet/outlet guarded • earth connected • protection set • rotation correct • pressure and current verified.

Compliance documentation: retain the declaration supplied for the exact UVS-FGM63 model with the product or project records.
Service: sales@uvents.com.tr • +90 212 482 0216 • www.uvents.com.tr