




**OPERATION AND ASSEMBLY MANUAL
OF AXIAL FANS TYPE ASE
models 1120 and 1250**

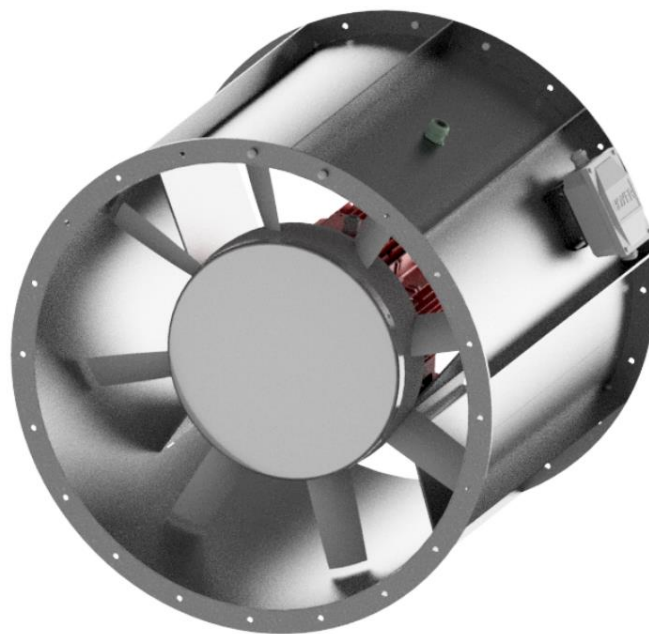

INTRODUCTION

This manual covers fan listed on front page. It is source of information necessary for safe and proper use. Read this manual carefully before any use of the device, comply with it requirements and keep it in place with easy access for users and service. If case of any doubts about use of the fan, please contact with manufacturer.



Additional requirements about use of the unit can be found in electric motor documentation and markings - those requirements need to be met.



After receiving the device - check

- Whether the device is in compliance with order?
- Whether the data on the rating plate are the same as desired?
- Whether fan was not damaged during transport (e.g. there are no dents/cracks)?
- Whether the following documentation has been attached to the fan:

1.	Declaration of conformity.
2.	Copy of the Certificate of constancy of performance.
3.	Declaration of performance.
4.	Motor documentation (user manual for three-phase induction motors).
5.	Motor documentation (installations and safety protection rules).
6.	Motor documentation (Fumex® motor maintenance instructions) .

In case of any irregularities, contact with your dealer or Venture Industries Sp. z o.o. service.

1. GENERAL INFORMATION

1.1 Information about device

- The fan is a not completed machine within the meaning of the Machinery Directive 2006/42/WE. The fan is made in accordance with 305/2011/CPR regulation and EN 12100-3 standard (please see the Declaration of Performance). The fan has two operation modes – standard operation mode and emergency operation mode (smoke extraction mode).
- **The device is designed to transport clean air and smoke (in smoke extraction mode).** Do not transport the explosive mixtures, liquids, viscous substances, substances with high humidity, substances that cause erosion, solid elements, and chemically reactive. The minimum temperature of transported medium is -20°C, maximum temperature is specified on the fan nameplate (for standard operation mode) and is 400°C for 2 hours (for smoke extraction mode).
- The fan is designed for outdoor use. It must be protected from effects of lightning. The fan surroundings cannot contain explosives atmospheres, substances causing abrasion, chemically aggressive substances and viscous substances. The minimum temperature of transported medium is -20°C, maximum temperature is specified on the fan nameplate (for standard operation mode). The fan is not designed to operate near hot fume.
- The device must not be exposed to radiation (such as microwave, UV, laser, x-ray).
- Details of fan construction have been included in appendix A.
- Additional information on usage of the fan have been indicated on the device as markings. More information is introduced on appendix B.
- Fan is designed for use by trained, qualified adult persons. The fan is not designed for household and similar use.

1.2 General risk and guidelines

During entire fan life cycle pay particular attention to **the risk and guidelines** presented below:

1.2.1 Moveable components

- The fan is equipped with moveable components (impeller of the device, impeller of the motor). Contact with them may cause serious injury or death. The fan must not be used if covers (grids) and safety measures against contact with rotating parts have not been installed.



1.2.2 Suction

- The fan has high suction power. Clothing, hair, foreign particles, and even body elements can be easily sucked in. It is forbidden to approach the fan in "loose" clothing or reaching toward inlet of working fan and motor impeller. It need to be ensured, that no foreign body can be sucked in.

1.2.3 Thrown elements

- The air at the outlet of the fan has high energy. Elements sucked or placed inside the fan can be thrown with a high speed. The fan has stable, solid construction, but as a result of damage or improper use some parts (elements with high kinetic energy) may be thrown away. Make sure that before start and during operation of the fan there are no elements, that may be sucked in (pay special attention to fan inlet side) and there are no person in stream of transported medium (on inlet and outlet side). Do not use fan without proper inlet, outlet covers (grids).

1.2.4 Sharp edges

- During manufacturing the fan sharp edges was grinded. However the fan may have edges touching which may cause injury. We recommend the use of relevant protective gloves.



1.2.5 Inertness

- The fan has a high inertness. In case of no permanent fix turning on the fan will lead to it uncontrolled movement. The unit can be turn on only after proper installation.

1.2.6 Noise

- The sound pressure level is dependent on the operation point. Check the sound pressure level and if necessary use silencers and/or individual protection measures for personnel. Sound pressure level generated by the fan is on www.venture.pl.



1.2.7 Materials

- In case of fire or transport of improper medium – fan parts can generate fumes hazardous to health.

1.2.8. Environment

- The fan can make over and under pressure. In areas where a specified air pressure and the quantity of air are required (e.g. in places with combustion) make sure that there would be no deficit/excess of air.

1.2.9 Temperature (hot surfaces)

- The housing and fan elements take the temperature of transported medium. During work (e.g. as a result of compression process) the temperature of medium, housing and fan components increase. Electric motor heat up to high temperatures (especially when overloaded/overheated). The appropriate steps need to be made to prevent from fire and burns caused of high temperatures. **In case of fire – to extinguish a fire use fire extinguisher approved for electrical equipment and follow recommendation of fire department.**



1.2.10 Unexpected start / connecting power supply

- Before undertaking any kind of work on fan (e.g. installation, maintenance and inspection, disassembly), it has to be completely and reliably disconnected (isolated) from power supply (check there is no voltage). It has to be ensured, that power supply will not be connected during work on fan and moveable parts are not moving.
- The fan has stable, solid construction, but as a result of damage or improper use some parts (elements with high kinetic energy) may be thrown away. In case of improper protection there is risk of sucking foreign elements into the fan. Risk arising from damaging electrical wires placed inside fan / air stream - e.g. using appropriate construction grounding and security device in fan supply line.
- Capacitor (only single phase fans) is still energized for certain period of time after turning off the power supply.
- The appropriate steps need to be made in order to provide protection against electric shock and to prevent from access to electrical components by unauthorized person.
- Fan is not equipped with control system – the connecting of power supply causes immediate start-up. The device is not equipped with system, that would permanently shut it down in case of temporary power supply loss. It has to be ensured, that any dangerous or unpermitted event does not occur in case of temporary loss of power supply.
- Thermal sensors installed in motor (if fitted) after tripping caused by motor overheat turn back to initial state after cooling down. It has to be ensured, that any dangerous or unpermitted event does not occur in case of action of thermal sensors and after motor cooling down.
- In case of impeller jamming – its unblocking may cause sudden movement. Appropriate steps need to be made in order to avoid impeller jamming. In case of impeller jamming, fan need to be completely disconnected from power supply and repaired.
- After disconnecting from power supply fan still works for certain time (moveable parts are moving) as a result of energy accumulation.



1.2.11 Use

- Improper installation and/or use may lead to damage of the device and occurrence of dangerous situation. The unit can be installed, maintained, dismantled and used only by qualified and authorized personnel, in accordance to safety rules and current regulations in the country of use (including proper electrical authorization). Personnel need to be familiar with reactions caused by the fan.
- **Using of fan in dismantled/uncompleted state is forbidden, e.g. without junction box cover, revision cover.**
- During the works (e.g. maintenance, installation) the fans surrounding need to be protected from bystanders approach.
- Any modifications of the unit are forbidden. Complicated maintenance work (such as dismantling the motor or impeller) need to be made by Venture Industries Sp. z o.o. service or with it permission - according to additional guidance. Improper assembly may lead to reduce the fan parameters, damage the unit and lead to the dangerous situation.

1.2.12 Accumulation of dust

- Prevent the accumulation of dust, sediment on and inside the fan. Dirt accumulated on: grids – reduce the fan parameters; impeller – may lose its balance; housing and motor – can reduce the cooling; hot surfaces (see 1.2.9) – may ignite.

1.2.13 Explosive atmospheres


- Contact of the fan with explosive atmospheres cause ignition. It is forbidden to contact the fan with explosive atmospheres.



2. TRANSPORT AND STORAGE

2.1 Transport and storage guidelines

- The fan need to be transported and stored in original packaging, without excessive shocks. The device must be protected from weather conditions, transported and stored in dry, well ventilated, and free from substances harmful to the device areas. The fan cannot be transported and stored in areas with fertilizers, chlorinated lime, acids and other aggressive chemicals. Fan need to be protected against foreign body entrance.
- Protect the fan against damage (including crush). After lifting unit it need to be put slowly.
- Do not lift the unit by impeller, motor elements. **During lifting the device must remain stable.**
- The fans should be lifted by the structural elements provided for this (according to Fig. 1).

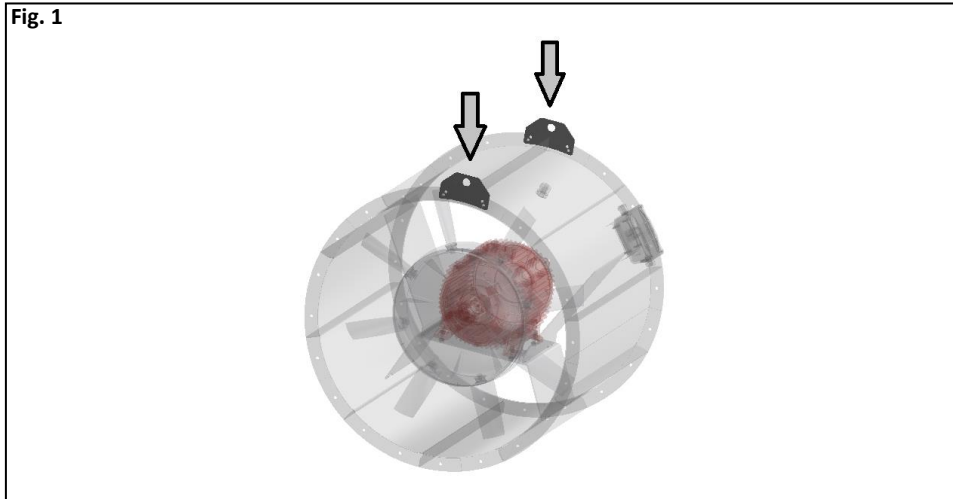

- Do not approach lifted device. In case of breaking, falling device may cause serious injury or death.
- It is recommended that storage time does not exceed one year. After long storage, before installation check the fan. (section 5).



3. ASSEMBLY AND INSTALLATION

3.1 General information


- During installation follow the guidelines contained in section 1.2
- The fan is machine not ready for use (within the meaning of the Machinery Directive 2006/42/WE) – before use of the device ensure conformity with requirements of Machinery Directive 2006/42/WE. **The fan used in the smoke exhaust mode must be used in accordance with the guidelines for smoke and heat control systems.**
- Before installation remove temporary items that protect fan during transport and storage (e.g. box, foil, inlet and outlet caps – do not remove any guards) – Starting the fan with those items could lead to damage of the fan. Make sure that the fan is not damaged.
- Ensure that there are no foreign bodies (e.g. mounting elements, tools) inside fan and near of the unit, the fan is properly secured after installation (the cover of connection box and inspection cover are closed and secured, the connecting elements are properly tightened). Technical acceptance need to be carried out in accordance with Appendix C.

During mechanical connection special attention need to be paid to prevent from falling solid objects into fan, which would lead to it damage.




3.2 Assembly information

- Fan need to be mounted in position presented on Fig 2., with horizontal motor shaft position (with motor base on bottom). Other montage positions are allowed only after manufacturer approval. Fan need to be mounted with use of outlet flanges (all holes placed in flange need to be used) or with use of dedicated feet (all holes in mountign feet need to be used). Fasteners secured against loosing need to be applied.

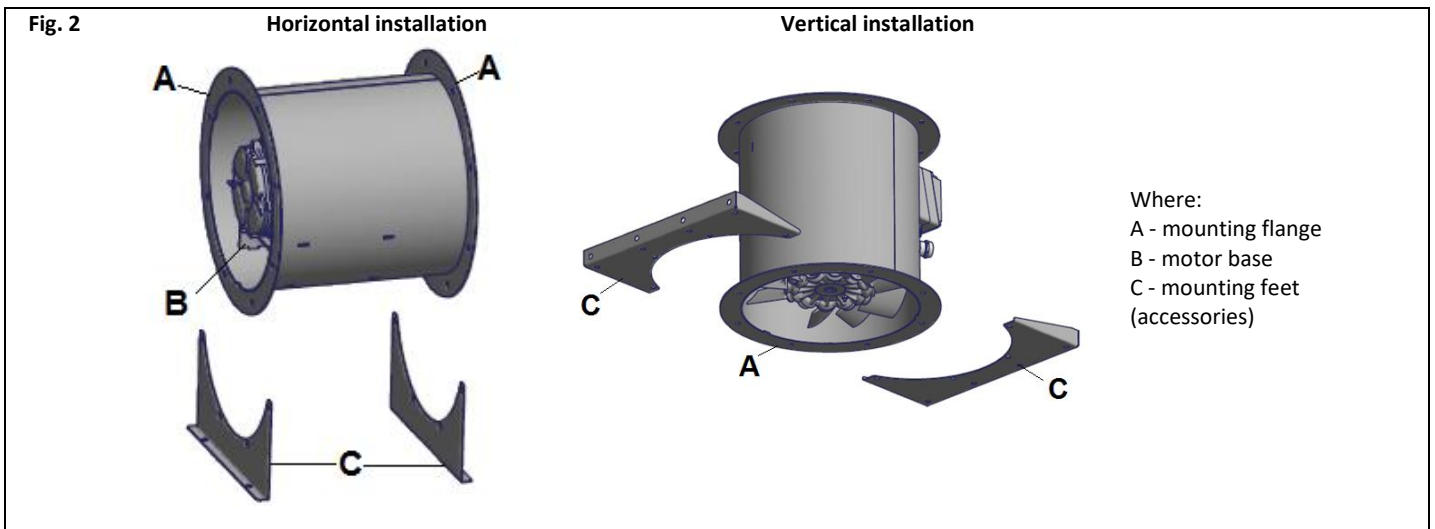

- Supporting construction has to be solid enough in order to carry the weight of the fan and generated vibration (including fan damage). The fan cannot be exposed to vibration.
- Covers from inlet and outlet side need to be applied. Covers need to protect from touching the impeller according to ISO 13857.

- It is recommended to apply measures minimizing transmission of vibration from/to the fan. For fans placed on vibro-isolators connecting on inlet and outlet side need to be made in flexible form.
- To maintain optimum fan performance - we recommend applying minimum 3 fan diameters between inlet and obstacles, and outlet and obstacles (e.g. walls).

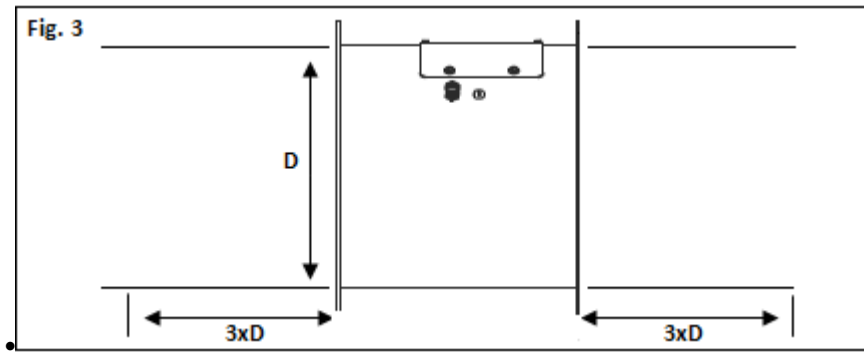


- Keep safe distance between installed device and inflammable elements (special attention to hot surfaces of device need to be paid).
- Keep free space from the fan outlet to allow free discharge of the pumped medium
- Measures protecting user from burn by hot elements need to be applied.



3.3 Electrical connection guidelines

- The fan and power supply network must be protected in accordance with local law requirements.
- Detailed guidelines related to electrical connection are located in motor operation manual and on motor markings - those guidelines need to be applied.
- In smoke extraction mode smoke and heat control systems regulations should be followed.
- Electric connection should be made in accordance with following diagram:

SINGEL SPEED MOTORS

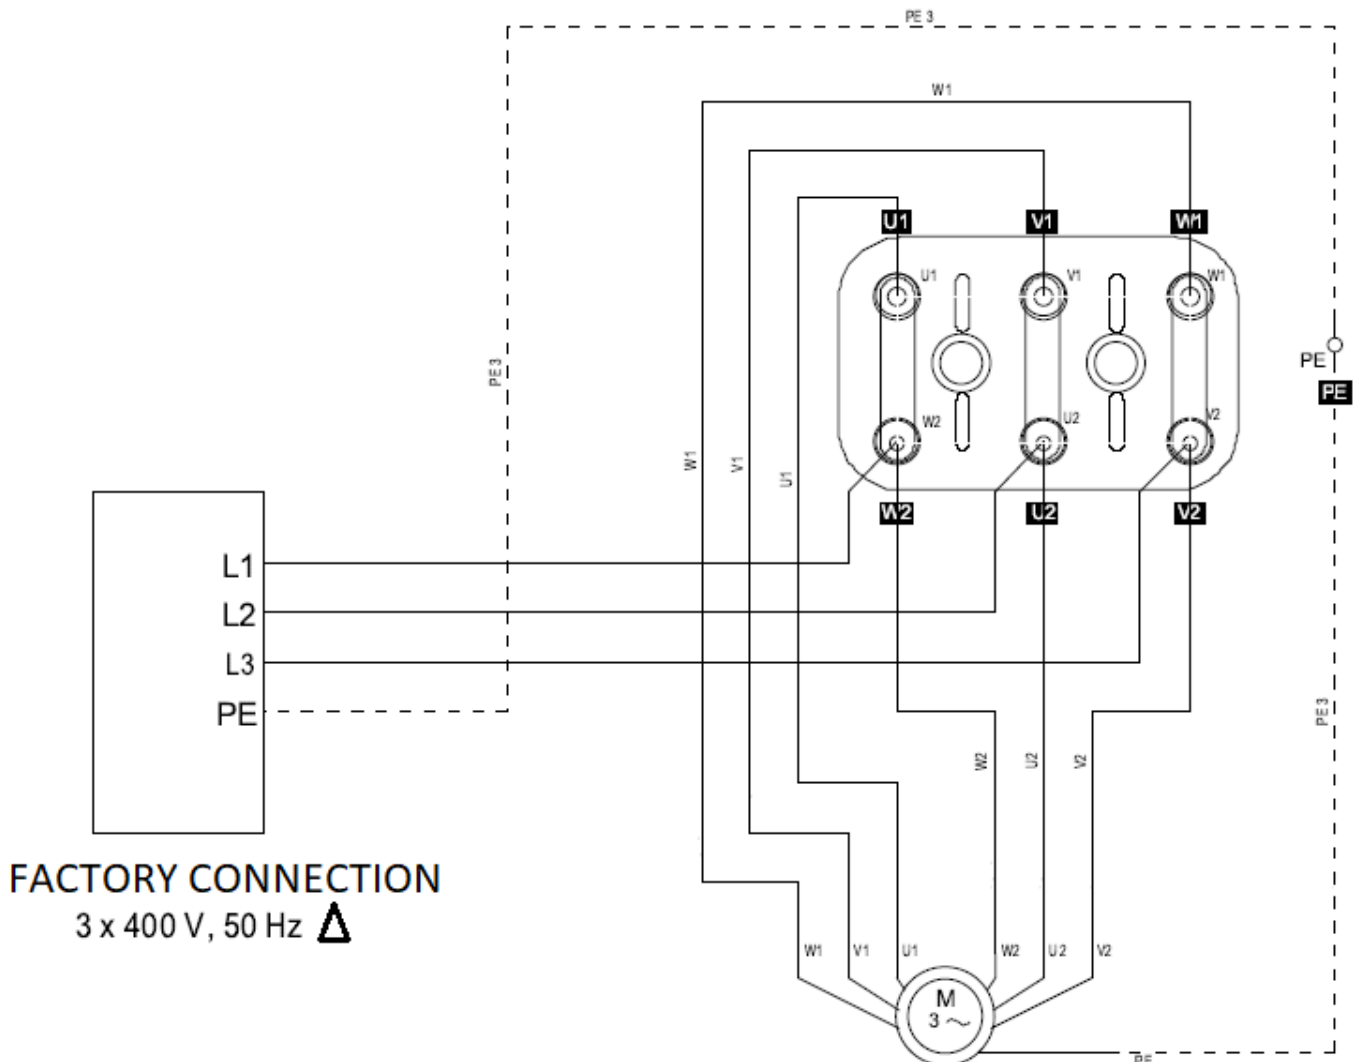

TWO-SPEED MOTORS

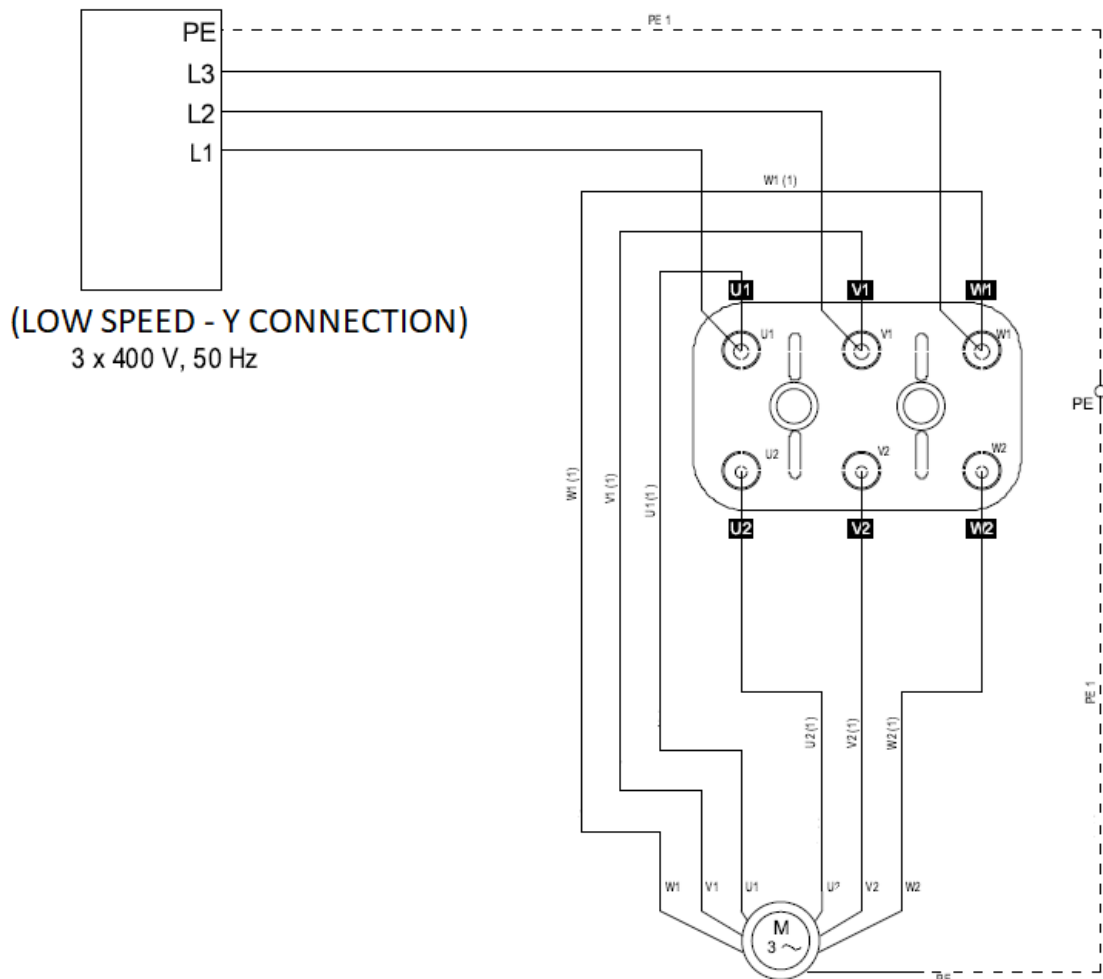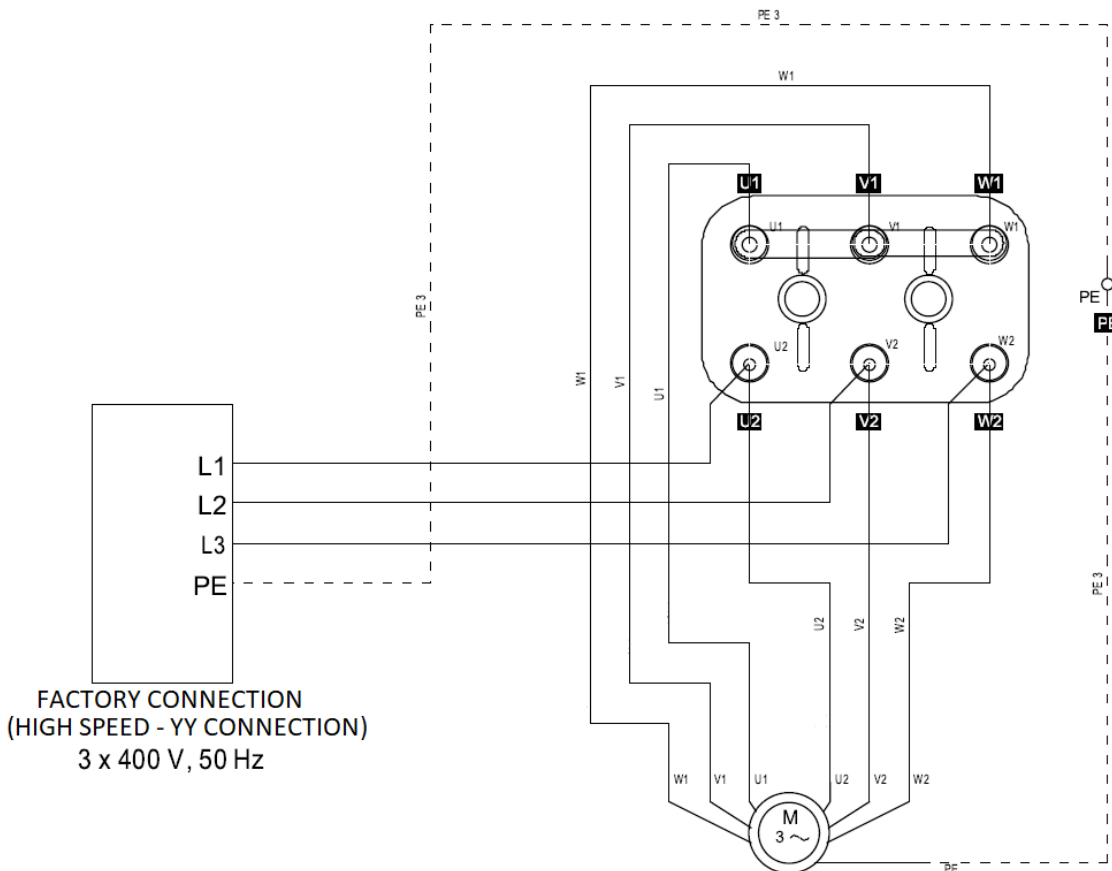

- Voltage and frequency cannot exceed values indicated on the nameplate.
- Use electrical wires with proper insulation and size. Wires should be pleaced in way that in any situation will not touch the moving elements, and that the water (eg. from condensation) not flow inside the junction box. Wires should be connected to the terminal box, through properly tightened cable glands and wire fasteners.
- The manufacturer allows the change cable glands, as well as replacing the end cap with a cable gland or adding a reduction only at the external box of the fan from the power supply side, with particular attention to the behavior of the cable gland series and reduction. Reduction SKINDICHT® MR-M series, cable gland SKINTOP® MS-M-XL series. When changing cable glands and reducing, use appropriate sealing using elements from the SKINDICHT® O-ring NBR series.

3.4 Impeller rotation direction

Make sure that after installation and during using the fan the impeller would rotate in correct direction. After mounting fan to proper construction, with special care taken and in accordance with sector 1 and 4, launch the fan in impulse way (less than 1 second) and check, if the impeller rotates in correct direction, generating airflow in proper direction. The work with impeller rotating in the wrong direction reduces fan parameters and may damage it. In case of improper impeller rotation, turn of power supply, wait until impeller stops and change proper power supplying wires in junction box.

4. USE

4.1 Use guidelines

- Make sure that turning on of the fan does not make any hazard for personnel and property. Follow the guidelines featured in section 1.2.
- The fan is designed for continuous operations (S1) – too high frequency of starting a fan may lead to motor overheat and damage.
- **Fan cannot work with voltage, frequency, current higher than shown on the fan nameplate** (even if motor nameplate/manual allows it). Applying of higher frequency may cause motor damage or mechanical damage of the fan.
- **Use of fan with lowered voltage is not allowed** - it may cause e.g. lack of fan start-up and motor overheating and damage.
- The device cannot work with current consumption exceeding the value indicated on the nameplate.
- In case of activation of any electrical protection, detection of damage, unit must by immediately turn out off use.
- The device is adapted to work in certain range of characteristic. Too low volume flow rate of medium, start/work of device with completely closed inlet and/or outlet may lead to motor overheat caused by current consumption exceeding value on the rating plate (current consumed by fan grows as resistance of installation grows).
- Units work parameters (temperature of medium, ambient temperature, min and max flow rate....) refer to rated speed.

5. MAINTENANCE, REVIEW

5.1 Maintenance guidelines

- During maintenance and review follow the guidelines contained in point 1.2
- Fan need to be subject of regular review and maintenance (point 5.2).
- **Maintenance and review of motor need to be overtaken in accordance with motor documentation and markings.** Exchange of motor bearings need to be made before the end of current bearing lifetime.
- To clean fan construction use slightly damp delicate material. It is prohibited to use detergents, liquids under pressure and tools that may scratch the unit surface.
- The fan need to be turned on at least once a month (minimum couple of impeller turns).
- Ensure that there are no foreign bodies (e.g. assembly components, tools) near and inside the fan, the impeller is not blocked, the unit is clean, dry and secured after maintenance and review. After cleaning finishes, turn on the fan at max speed for 30 minutes.
- During review special attention to the following need to be paid:



dust and dirt	Prevent the accumulation of dust/dirt on and inside the fan. Dirt accumulated on: grids – may reduce the fan parameters; housing and motor – can reduce the cooling; hot surfaces –may ignite. Special attention must be paid to motor cooling impeller and its cover. Reduction of cooling ability may lead to overheat of motor without working of safety devices.												
corrosion	Corrosion of the fan may lead to mechanical damage of it. It is forbidden to use the fan if corrosion appears												
overload	Exceeding of nominal current may be caused by improper choice of fan, mechanical damage (e.g. impeller, bearing), improper electrical connection. Current value must be controlled, and if its growth is noticed, the reason need to be determined and device need to be repaired. Current value cannot exceed nominal value.												
vibration	<p>Excessive vibration may cause mechanical damage of the fan or it mounting construction. The vibration increase can indicate bearings damage or loss of impeller balance. Vibration value need to be controlled, and if its growth is noticed, the reason need to be determined and device must be repaired.</p> <p>Maximum vibration value on bearings (perpendicular to motor shaft) after fan installation cannot exceed value presented in table below:</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th colspan="2">rigidly mounted*</th> <th colspan="2">flexibly monted*</th> </tr> <tr> <th>peak</th> <th>r.m.s</th> <th>peak</th> <th>r.m.s.</th> </tr> </thead> <tbody> <tr> <td>6.4 mm/s</td> <td>4.5 mm/s</td> <td>8.8 mm/s</td> <td>6.3 mm/s</td> </tr> </tbody> </table> <p>*according to ISO 14694</p> <p>Note: Vibration measurement on bearings need to be made with specialistic equipment that allows safe control - without risk of contact of user with rotating elements (see ISO 13857).</p>	rigidly mounted*		flexibly monted*		peak	r.m.s	peak	r.m.s.	6.4 mm/s	4.5 mm/s	8.8 mm/s	6.3 mm/s
rigidly mounted*		flexibly monted*											
peak	r.m.s	peak	r.m.s.										
6.4 mm/s	4.5 mm/s	8.8 mm/s	6.3 mm/s										

5.2 Review and maintenance

- The set between routine checks and maintenance need to be determined by user, based on the observation of unit and specific conditions of use, in order to include specific work conditions. The set cannot be longer than introduced below.
- In the case of irregularities the device must be turn off and subjected to review, maintenance and possible repairs / cleaning (when dirt occurs). Examples of reasons for device to work in emergency mode are given in Appendix D.
- Staff operating the device must be familiar with it normal working conditions. If the fan work differ from it normal working conditions it need to be turn off from work and inspected.

Recommended daily review:

- Device is undamaged, stable and works properly;
- There are not any leaks, smoke from motor;
- Device does not emit any untypical noise, vibration and does not heat up excessively;
- Device is clean (general control), corrosion does not occur (general control);
- Wires are not damaged;
- There are no untypical leaks from fan;
- Covers are in proper state and clean.

Mmonthly review

- Fan current value is not higher than beginning value;
- The vibration value has not increased in relation to the initial value;
- Device and covers are clean;
- Device is clean, filter is not clogged.

Review once per 3 months, not less than 6 month and 3000 hours of work

- Corrosion does not occur;
- Fasteners state is proper (they are properly tightened);
- Security devices are working and set properly, protection against electrical shock is effective;
- Motor insulation resistance value is correct;
- Vibration value is lower than permissible;
- Structure is complete, components are not damaged (**e.g. by abrasion**).

Minimum every 10 years it is necessary to control the impeller due to fatigue strength. After the fan operation in the smoke removal mode, the device should be replaced with new ones.

Fan review made by Venture Industries Sp. z o.o. service is recommended.



6. REPAIR, WARRANTY


Use only original spare parts and original accessories. Fan repairs need to be made by Venture Industries Sp. z o.o. service or outside, after manufacturer permission. Warrantee conditions are described in guarantee card.

7. DISMANTLING AND RECYCLING

Disconnect unit from its power supply, and dismantle according to the guidelines from section 1 of this instruction. Therefore, please deposit all left-over material and packaging in their corresponding recycling containers and hand in the replaced machines to the nearest handler of this type of waste product.

APPENDIX A - (SCHEMATIC DIAGRAM OF THE FAN / LIST OF DEVICES)

1. General overview

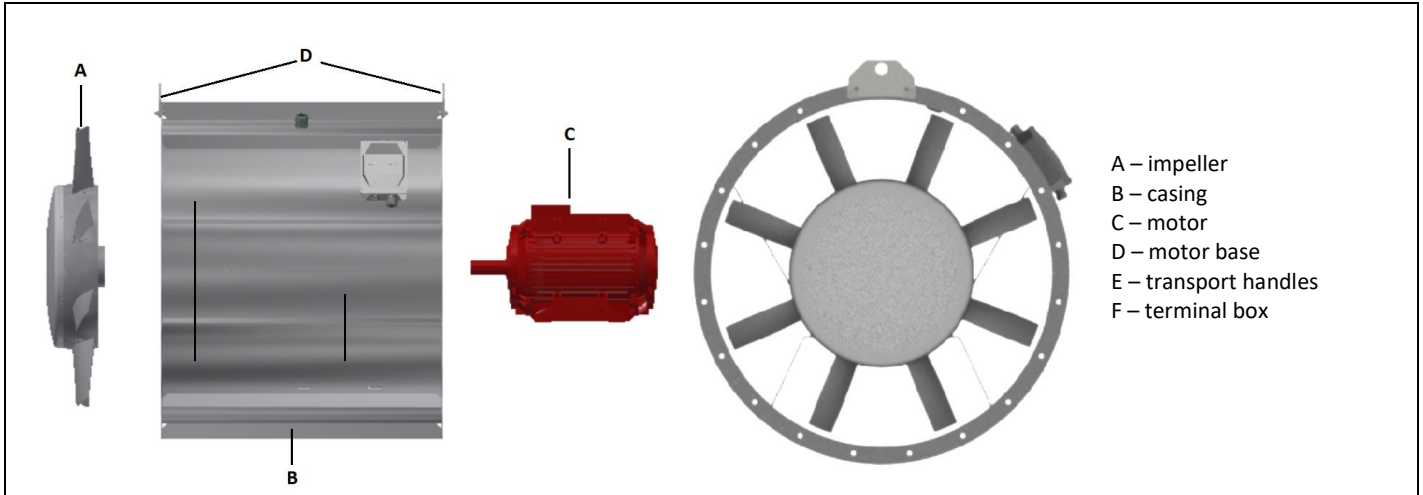



The fan housing (B) is made of sheet steel. The housing is welded and then hot dip galvanized. The impeller blades (A) and the hub are cast from aluminum, while the hub insert is made of steel. Connecting elements made of steel, galvanized steel and stainless steel were used.

Detailed information on the components used and their tightening torque (doesn't apply to the elements in which the motor is equipped) have been attached to this manual or are available on request.

2. Table of fan versions:

Art. No	Name	Voltage	Power	Rpm Max
42513491	ASE/4-1120-8/33-1850T	400/690V, 50Hz	18,5kW	1500
42513492	ASE/4-1120-8/36-2200T	400/690V, 50Hz	22,0kW	1500
42513493	ASE/4-1120-8/39-2200T	400/690V, 50Hz	22,0kW	1500
42513494	ASE/4-1120-8/42-3000T	400/690V, 50Hz	30,0kW	1500
42513495	ASE/4-1120-8/45-3000T	400/690V, 50Hz	30,0kW	1500
42513496	ASE/4-1120-8/48-3700T	400/690V, 50Hz	37,0kW	1500
42513497	ASE/4-1120-8/51-3700T	400/690V, 50Hz	37,0kW	1500
42513891	ASE/4/8-1120-8/33-2200/440T	400V, 50Hz	22,0/4,4kW	1500/750
42513892	ASE/4/8-1120-8/36-2200/440T	400V, 50Hz	22,0/4,4kW	1500/750
42513893	ASE/4/8-1120-8/39-2200/440T	400V, 50Hz	22,0/4,4kW	1500/750
42513894	ASE/4/8-1120-8/42-3000/600T	400V, 50Hz	30,0/6,0kW	1500/750
42513895	ASE/4/8-1120-8/45-3000/600T	400V, 50Hz	30,0/6,0kW	1500/750
42513896	ASE/4/8-1120-8/48-3700/700T	400V, 50Hz	37,0/7,0kW	1500/750
42513897	ASE/4/8-1120-8/51-3700/700T	400V, 50Hz	37,0/7,0kW	1500/750
42513501	ASE/4-1250-8/33-2200T	400/690V, 50Hz	22,0kW	1500
42513502	ASE/4-1250-8/36-3000T	400/690V, 50Hz	30,0kW	1500
42513503	ASE/4-1250-8/39-3000T	400/690V, 50Hz	30,0kW	1500
42513504	ASE/4-1250-8/42-3700T	400/690V, 50Hz	37,0kW	1500
42513505	ASE/4-1250-8/45-3700T	400/690V, 50Hz	37,0kW	1500
42513506	ASE/4-1250-8/48-4500T	400/690V, 50Hz	45,0kW	1500
42513901	ASE/4/8-1250-8/33-2200/440T	400V, 50Hz	22,0/4,4kW	1500/750
42513902	ASE/4/8-1250-8/36-3000/600T	400V, 50Hz	30,0/6,0kW	1500/750
42513903	ASE/4/8-1250-8/39-3000/600T	400V, 50Hz	30,0/6,0kW	1500/750
42513904	ASE/4/8-1250-8/42-3700/700T	400V, 50Hz	37,0/7,0kW	1500/750
42513905	ASE/4/8-1250-8/45-3700/700T	400V, 50Hz	37,0/7,0kW	1500/750
42513906	ASE/4/8-1250-8/48-4100/820T	400V, 50Hz	41,0/8,2kW	1500/750

APPENDIX B - (PRODUCT INDICATION)

		Venture Industries Sp. z o.o. 05-092 Kielpin, ul. Mokra 27 Poland www.venture.pl			
[1]					
Motor	[2]	[3] kW	[4] A	IP	[5]
[6] V	[8] Hz	[9] rpm	Ins. class [10]		
Weight [11] kg	Temp. ambient max. [12] °C		Temp. max. [13] °C		
			[14]		
No.: [15]			Art. No.: [16]		

Powered Smoke and Heat Control ventilator.
[17]
EN 12101-3:2015
Product: [1]
Intended to be installed as part of a powered smoke and heat control ventilation system in construction works
Response delay:
-opening under wind load within a given time: NPD
-opening under snow load within a given time: NPD
Operation reliability:
- Application category: Dual purpose
- Motor rating: F, 80 K
Effectiveness of smoke / hot gas extraction
- Gas flow and pressure maintenance during smoke and heat extraction test: ± 10%
- Resistance to fire: F400-120
Ability to open under environmental conditions:
-opening under wind load within given time: NPD
-opening under snow load within a give ntime: NPD
Durability of operational reliability: F, 80 K
This Powered Smoke and Heat Control ventilator shall be installed as per the manufacturer's instruction.

[1] – product full name

[2] – motor type

[3] – motor power

[4] – nominal current

[5] – motor IP class

[8] – nominal voltage

[8] – power supply frequency

[9] – nominal fan speed

[10] – motor insulation class

[11] – weight

[12] – max ambient temperature

[13] – max temperature of transported medium

[14] – information of accordance with ErP Directive (if apply)

[15] – serial number

[16] – Art. no.

[17] – No. of Declaration of Performance

APPENDIX C - (RECEIPT FORM)

Before launch	Check confirmation
Type and model of fan are in accordance with the order.	
The fan is undamaged.	
There is no foreign body inside fan and the fan is clean.	
The fan is reliably and solidly fixed in workplace.	
The fan is properly levelled.	
Wires are properly tightened.	
Ambient temperature and transported medium temperature are compatible with fan nameplate.	
Proper electrical protection is applied.	
Grounding of fan is applied.	
Mains supply is compatible with fan power supply.	
Power supply disconnecting switch (with 3mm visible gap) is applied.	
Personnel using the fan read and understood the operation and montage manual.	
Proper inlet and outlet covers (grids) have been applied.	
After fan launch (continuous work period minimum 30 minutes)	
Readings and set of vibration measurement device has been written (they are available in future).	
Value of current for each of phase does not exceed nominal one.	
The vibration value is not higher than permitted.	

APPENDIX D - (EXAMPLES OF DEVICE FAULTY WORKING)

SYMPTOMS	POSSIBLE REASON
Excessive vibration or noise	<ul style="list-style-type: none"> • Used or damaged impeller; • Fan levelled in wrong way; • Dirt accumulated on impeller caused loss of balance; • Impeller loss of balance; • Parts rubbing; • Damage or wear of bearings; • Damage of measurement system, that is responsible for signalization of excessive vibration. • Deformed motor shaft; • Loose of impeller fix screw, impeller is loose on motor shaft; • Loss of balance of motor impeller or damage of motor (wear/damage of bearing).
Motor overload	<ul style="list-style-type: none"> • Rubbing between fan impeller and housing; • Damage or wear of bearings; • Damage of motor windings (overheat, insulation degradation, insulation breakdown etc.); • Damage of switch or security system; • Failure of one of supply phases; • Exceeding of maximum motor speed; • Too low flow.
Failed fan start-up	<ul style="list-style-type: none"> • Rubbing between fan impeller and housing or foreign body (e.g. tool left after installation); • Failure of one of supply phases; • Failure of start-up system, e.g. Y/D; • Reset of security devices has not been made, wrong security device; • Motor connected in wrong way or damaged; • Too low supply voltage.
Protective devices activation during fan work and overheating	<ul style="list-style-type: none"> • Excessive start-up time; • Motor overload; • Motor launching done too often (thermal protection – if applied or overheating); • Improper set of protection system e.g. in system with PTC or thermocontact sensors (if applied); • Improper cross-section of power supply wires; • Lack of sufficient motor cooling eg. dirt placed on motor cooling impeller (thermal protection – if applied or overheating).
Too low flow	<ul style="list-style-type: none"> • Damage of device; • Too low power supply frequency; • Obstacles in ventilation installation.

APPENDIX E (DECLARATION OF MANUFACTURER)

EU Declaration of Conformity in accordance with 2014/30/EU Directives and Regulation (EU) No. 305/2011
EC Declaration of Incorporation in accordance with 2006/42/EC Directive



Manufacturer:
Venture Industries Sp. z o.o.
ul. Mokra 27
05-092 Łomianki-Kielpin
Polska

doc. no. K3.1.14102022_EN

Declares that the product described below:

Name: Axial smoke exhaust fan
Type: **ASE**
Model and serial no.: All manufactured
CE marking date: 2020 - in accordance with 2014/30/EU Directive and Regulation (EU) No. 305/2011
Use/Function: Transport of specified medium **after incorporation into machinery/installation**

complies with the requirements of:

- Machinery Directive 2006/42/EC – Annex I, item: 1.3.4, 1.5.1, 1.7.1.
- Electromagnetic Compatibility Directive 2014/30/EU

Compliance with 2014/30/EU Directive applies to the single product. When product is used with other components the installer is responsible for compliance of entire system with the provisions of 2014/30/EU Directive.

Following standards were applied (partially or full):

EN ISO 12100

EN 60034-1

EN 60204-1

Furthermore:

- Product is partly completed machinery (as defined by Directive 2006/42/EC), and it must not be put into service until the machinery in which it is incorporated has been declared in conformity with the provisions of 2006/42/EC Directive (and its amendments).
- The machinery (installation) into which the product is incorporated should particularly meet the requirements of current standards: EN ISO 12100, EN ISO 13857, EN ISO 13854, EN ISO 13850, EN 60204-1.
- In accordance with 2006/42/EC Directive requirements: The technical documentation for above mentioned product has been prepared in accordance with Directive 2006/42/EC, Annex VII, Part B, and is located in the manufacturer office: *Lotnicza 21A, 86-300, Grudziądz, Poland*. The person authorized to comply the relevant technical documentation: *Piotr Pakowski (Lotnicza 21A, 86-300, Grudziądz, Poland)*. Relevant information about the product will be provided in electronic or paper form in response to a reasonable request of national authorities.
- The product complies with Directive Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.
- According to the current level of knowledge, our suppliers of components, raw materials and preparations involved in our supply chain, working according to standards compatible with Regulation (EC) No 1907/2006 (REACH) and subsequent amendments.
- Integrated Management System is compliant with PN-EN ISO 9001:2015 and PN-EN ISO 14001:2015 standards.

Date: 14.10.2022
Kielpin

Wojciech Stawski
Managing Director

Appendix - F (Certificate of Constancy of Performance)


INSTYTUT TECHNIKI BUDOWLANEJ
CERTIFICATION DEPARTMENT

ul. FILTROWA 1, 00-611 WARSAW, POLAND
 tel.: + 48 (22) 57 96 167, + 48 (22) 57 96 168, fax: + 48 (22) 57 96 295
 e-mail: certyfikacja@itb.pl, www.itb.pl

CERTIFICATION MARK

The company:

VENTURE INDUSTRIES Sp. z o.o.
ul. Mokra 27
05-092 Łomianki – Kiełpin
Poland

being the manufacturer of the product:

Smoke and heat control ventilator (Fan) ASE

is authorized to use
 the ITB certification mark „WYRÓB BUDOWLANY”
 during the period of validity of the certificate no. 1488-CPR-0895/W


1488-CPR-0895/W

DEPUTY HEAD
 of the Certification Department



Piotr Maciejak M.Sc. Eng.



DIRECTOR
 of Instytut Techniki Budowlanej



Robert Geryto, Ph. D.

Warsaw, 29.10.2020



**NOTIFIED BODY No. 1488
INSTYTUT TECHNIKI BUDOWLANEJ
CERTIFICATION DEPARTMENT**

ul. FILTROWA 1, 00-611 WARSZAWA
ph.: +48 (22) 57 96 167, +48 (22) 57 96 168, fax: +48 (22) 57 96 295
e-mail: certyfikacja@itb.pl, www.itb.pl



**CERTIFICATE OF CONSTANCY OF PERFORMANCE
1488-CPR-0895/W**

In compliance with Regulation 305/2011/EU of the European Parliament and of the Council of 9 March 2011 (the Construction Products Regulation or CPR), this certificate applies to the construction product:

Smoke and heat control ventilator (Fan) ASE

with fire resistance class according to EN 13501-4:2016:

F₂₀₀ 120 F₃₀₀ 60 F₄₀₀ 120

General identification, intended use, essential characteristics and parameters are described in the Annex No. Z-1488-CPR-0895/W which is an integral part of this certificate

Levels and classes of performance of the product are stated in the Annex No. Z-1488-CPR-0895/W which is an integral part of this certificate

placed on the market under the name or trade mark of:

**VENTURE INDUSTRIES Sp. z o.o.
ul. Mokra 27
05-092 Łomianki-Kiełpin
Poland**

and produced in the manufacturing plants:

VENTURE INDUSTRIES Sp. z o.o. ul. Mokra 27 05-092 Łomianki-Kiełpin Poland	VENTURE INDUSTRIES Sp. z o.o. Oddział Grudziądz ul. Lotnicza 21A 86-300 Grudziądz Poland
--	---

This certificate attests that all provisions concerning the assessment and verification of constancy of performance described in Annex ZA of the standard:

EN 12101-3:2015

under system 1 for the performance set out in this certificate are applied and that the factory production control conducted by the manufacturer is assessed to ensure the constancy of performance of the construction product.

This certificate was first issued on 26.01.2017 (updated on 29.10.2020) and will remain valid as long as neither the harmonised standard, the construction product, the AVCP methods, nor the manufacturing conditions in the plant are modified significantly, unless suspended or withdrawn by the notified product certification body.

DEPUTY HEAD
of the Certification Department

Piotr Maciejak, M.Sc. Eng.



Warsaw, 29.10.2020

DIRECTOR
of Instytut Techniki Budowlanej

Robert Geryto, Ph. D.



**NOTIFIED BODY No. 1488
INSTYTUT TECHNIKI BUDOWLANEJ
CERTIFICATION DEPARTMENT**

ul. FILTROWA 1, 00-611 WARSZAWA
ph.: +48 (22) 57 96 167, +48 (22) 57 96 168, fax: +48 (22) 57 96 295
e-mail: certyfikacja@itb.pl, www.itb.pl



Annex No. Z-1488-CPR-0895/W page 1/1
which is an integral part of the certificate No. 1488-CPR-0895/W

Smoke and heat control ventilator (Fan) ASE

Essential characteristics and performances of the product acc. to EN 12101-3:2015

Essential characteristics and performances	Clauses	Levels and/or classes
Operational reliability Application categories Motor rating	4.2.2 4.2.3	Termally uninsulated
		Installation outside the smoke reservoir
		Horizontal or vertical direction of motor shaft
		Converter or direct feed
		Dual purpose use
		H, Δ 105K
Resistance to fire	4.4	F ₂₀₀ 120 F ₃₀₀ 60 F ₄₀₀ 120
Durability of operational reliability	4.6	H, Δ 105K

Intended use:
Fire safety

Detailed identification, scope and conditions of use:
Classification report no. 02313/19/Z00NZP issued on 07.08.2020

DEPUTY HEAD
of the Certification Department



Piotr Maciejak, M.Sc. Eng.



Warsaw, 29.10.2020

DIRECTOR
of Instytut Techniki Budowlanej



Robert Geryło, Ph. D.

Appendix - G (Declaration of performance)



Declaration of performance

No. VI_001-CPR-2020

Venture Industries Sp. z o.o.
27 Mokra st.
05-092 Łomianki-Kielpin
Poland

1. Unique identification code of the product type:

Regulation (EU) No 205/2011 of the European Parliament and of the Council, Annex IV, Item 10 – Fixed firefighting equipment (fire alarm/detection, fixed firefighting, fire and smoke control and explosion suppression product).

Powered smoke and heat control ventilator type ASE

Classified: F₂₀₀120, F₃₀₀60, F₄₀₀120 (in accordance with PN-EN 13501-4:2016-07)

2. Type, batch or serial number or any other element allowing identification of the construction product as required under Article 11(4):

Name: Powered smoke and heat control axial ventilator

Type: ASE DN 1120-1250

Model and serial number: all manufactured

3. Intended use or uses of the construction product in accordance with the applicable harmonized technical specification, as foreseen by the manufacturer:

Bifunctional device of fire protection for extraction of smoke and hot gases which operates in general ventilation and during fire.

4. Name, registered trade name or registered trade mark and contact address of the manufacturer as required under Article 11(5)

Venture Industries Sp. z o.o.

27 Mokra st.

05-092 Łomianki-Kielpin

Poland

5. . Where applicable, name and contact address of the authorised representative whose mandate covers the tasks specified in Article 12(2):

Not applicable

6. System or systems of assessment and verification of constancy of performance of the construction product as set out in CPR, Annex V

System 1

7. In case of the declaration of performance concerning a construction product covered by a harmonized standard:

Notified body: BUILDING RESEARCH INSTITUTE, CERTIFICATION DEPARTMENT, ul. Filtrów 1, 00-611, Warsaw, Poland, Notified body no. 1488 – according to following elements of System 1:

-determining the product type on the basis of type testing (including sampling) and descriptive documentation of the product;

-initial inspection of the manufacturing plant and factory production control

-continuous surveillance, assessment and evaluation of factory production control

Issued the Certificate of Constancy of Performance No. 1488-CPR-0895/W

8. In case of the declaration of performance concerning a construction product, for which technical assessment was issued

Not applicable

Signed and on behalf of the manufacturer by:

Wojciech Stawski - Director
(name, job position)

Kielpin 29.10.2020
(place and date of issue)

(signature)

VI_001-CPR-2020
(document No.)

1 of 2
(page No.)



Declaration of performance

No. VI_001-CPR-2020

 Venture Industries Sp. z o.o.
 27 Mokra st.
 05-092 Łomianki-Kielpin
 Poland

9. Declared performance

Lp.	Essential characteristics of the product	Harmonized technical specification EN 12101-3:2015	Essential characteristics
1.	Application categories Motor rating	4.2.2 4.2.3	Uninsulated
			Adapted to work outside the smoke tank
			Adapted to work in vertical and horizontal position
			Converter-powered (powered by frequency converter) or powered directly (without changing the speed)
			Dual-purpose
			Class of motor insulation H, ΔT 105K
2.	Resistance to fire	4.4	F ₂₀₀ 120; F ₃₀₀ 60; F ₄₀₀ 120;
3.	Durability of operational reliability	4.6	H2, Δ 105K


10. The performance of the product identified in points 1 and is in conformity with declared performance in point 9.

This declaration of performance is issued under sole responsibility of the manufacturer identified in point 4.

Signed and on behalf of the manufacturer by:

Wojciech Stawski - Director
(name, job position)

Kielpin 29.10.2020
(place and date of issue)


(signature)

VI_001-CPR-2020
(document No.)

2 of 2
(page No.)